Epson® PowerLite® Cinema 500 Update

Your projector includes an additional picture quality setting not described in your *User's Guide*. If you notice faint vertical bands in the picture, you can eliminate them by following these steps:

1. Turn on the projector and let it warm up for about 10 minutes.
2. Darken the room lights. You do not need to project an image from a video source to perform this adjustment.
3. Press the Menu button on the remote control.
4. Use the ▲▼ arrow buttons to highlight the Setting menu, press ↵ to select it, then open the Operation menu and select LCD Panel Adjustment.

   You see this screen, which lets you correct each of the three RGB (red, green, blue) color components:

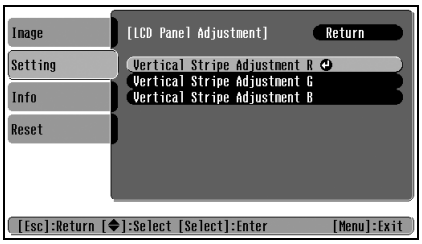

5. Select Vertical Stripe Adjustment R. You see this screen:

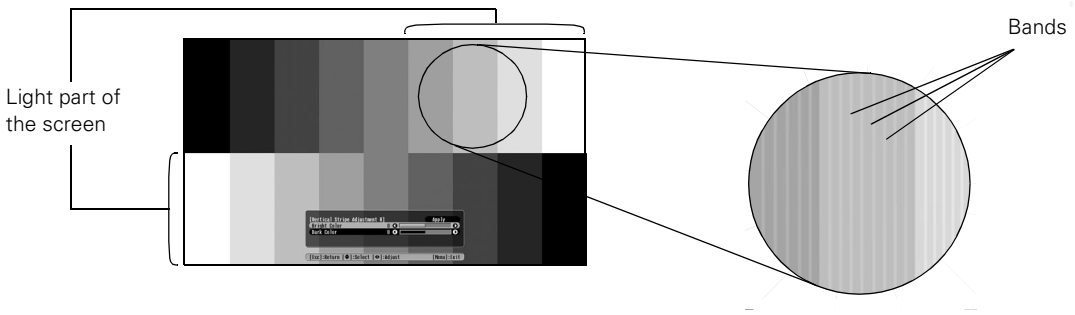

6. Look at the screen to determine where the vertical bands are more visible—in the light or dark part of the screen. This is the part you should adjust first.

   Note: The banding (if visible) appears within each bar or stripe on the screen.

7. If the bands are more visible in the light part of the image, select Bright Color—otherwise, select Dark Color.
8. Move the slider bar until the bands disappear, then repeat the adjustment for the other (light or dark) part of the image.
9. Once both adjustments are done, highlight Apply and then press the ↵ button.
10. Repeat steps 5 through 9 to adjust the green (G) and blue (B) color components.
11. When done, press the Menu button to exit the menu system.

Epson is a registered trademark of SEIKO EPSON CORPORATION.

PowerLite is a registered trademark of Epson America, Inc.

© 2005 Epson America, Inc. 3/05